

crafting with dremel


It's so easy to create custom art with your Dremel MultiTool.

This is a great project for beginners, as it lets you practice as you create!

All you need is a 300 x 300mm block of 12mm SupaWood for the base, 4 blocks of 6mm supawood 200 x 200mm, 5 blocks of 3mm supawood 200 x 200mm, wood glue, Rust-Oleum Chalkboard Spray, and your Dremel 300.



easy!

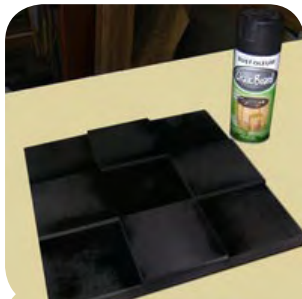

Here's how:


1. Apply a layer of wood glue over the entire base/back board. Don't be stingy as supawood is very absorbent, but don't pile on too much as it will only squeeze out of the sides.
2. Affix the [4] 200 x 200mm 6mm supawood blocks in north, east, south, west positions and press firmly. Fill in the remaining positions with the 3mm supawood blocks. Leave the glue to dry.
3. Spray the entire project with Rust-Oleum Chalkboard Spray, or use gloss spray if you prefer. Leave to dry.
4. Use a steel measuring rule to mark out lines on the individual blocks to create your desired pattern of vertical and horizontal lines, and dots.
5. With the high speed cutters 191 and 192 etch out your lines and grind out the dots. Practice on a spare piece of block before you tackle the actual project, to get a feel for the tool. Use your steel rule to guide you if you need help with the lines. Lightly guide the Dremel 300 along the rule.

DIY Tip:

As this is an ethnic design, don't worry about perfectly straight lines - it's not meant to be perfect!

Finishing

Use a wood oil to wipe clean and enhance the colours of the painted and carved wood. Use the 192 cutter to create a hole in the back of the board on which to hang your art.

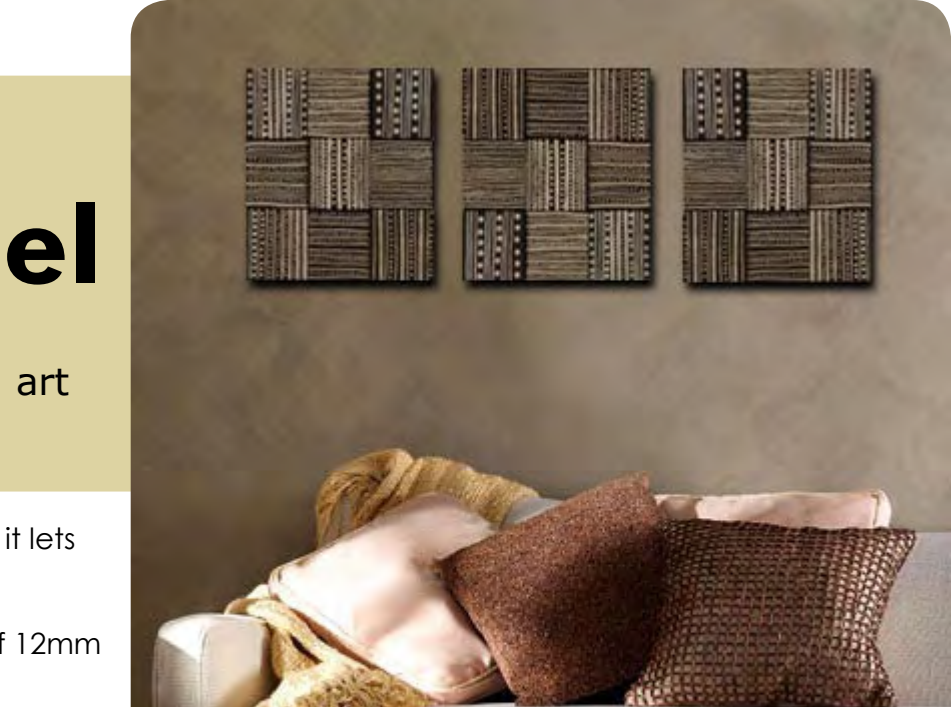

Dremel 300 series with High Speed Cutters 191 and 192

